


UBC – Zone 0
16HX800F, 16HX925F

Battery Rack
 AZMS: UAQ1 – 1 TIER
 UAQ2 – 2 TIER
 UAQ3 – 3 TIER
 UAQ5 – 4 TIER
 UAQ9 – 5 TIER

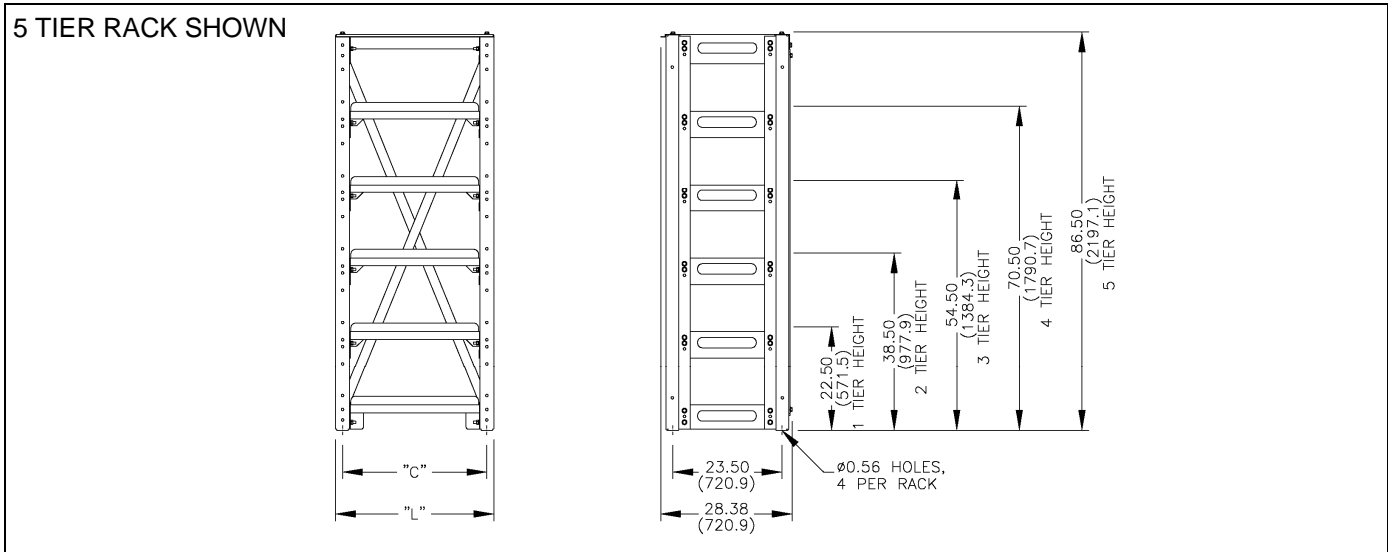

LENGTH	HEIGHT	CATALOG NO.	DIMENSIONS				UNPACKED WEIGHT		PACKED WEIGHT	
			L		C		lbs	kg	lbs	kg
			in	mm	in	mm				
4 BLOCS	1 TIER	U16HX9254J1TZ0A	34.38	873.3	31.38	797.1	204	93	254	115
	2 TIER	U16HX9254J2TZ0A					306	139	356	162
	3 TIER	U16HX9254J3TZ0A					410	186	460	209
	4 TIER	U16HX9254J4TZ0A					514	233	564	256
	5 TIER	U16HX9254J5TZ0A					617	280	667	303
5 BLOCS	1 TIER	U16HX9255J1TZ0A	41.31	1049.3	38.31	973.1	224	102	274	124
	2 TIER	U16HX9255J2TZ0A					335	152	385	175
	3 TIER	U16HX9255J3TZ0A					447	203	497	225
	4 TIER	U16HX9255J4TZ0A					559	254	609	276
	5 TIER	U16HX9255J5TZ0A					671	304	721	327
6 BLOCS	1 TIER	U16HX9256J1TZ0A	48.31	1227.1	45.31	1150.9	244	111	294	133
	2 TIER	U16HX9256J2TZ0A					364	165	414	188
	3 TIER	U16HX9256J3TZ0A					484	220	534	242
	4 TIER	U16HX9256J4TZ0A					604	274	654	297
	5 TIER	U16HX9256J5TZ0A					725	329	775	352

RACK SPECIFICATIONS:

FRAMES: Steel members covered with gray acid-resistant polyester powder coating
HARDWARE: Zinc-plated steel – RoHS compliant

RACK NOTES:

- Racks are shipped unassembled. All necessary assembly hardware is included – see note 2.
- Each frame must be anchored to the floor. Holes are provided at the base of each frame. Please refer to rack diagram for hole size and spacing. Determining the anchor bolt size and supplying the anchor bolts is the responsibility of the customer.
- For rack installation instructions, please refer to EnerSys® Publication No. US-HXRACK-IM, *Instructions for Assembling DataSafe® HX UBC Battery Racks*.



EnerSys
 P.O. Box 14145
 Reading, PA 19612-4145
 USA
 Tel: +1-610-208-1991
 +1-800-538-3627
 Fax: +1-610-372-8613

EnerSys EMEA
 Brussels, Belgium
 Tel: +32 (0)2 247 94 47

EnerSys Asia
 Guangdong, China
 Tel: +86 755 2689 3639

Represented by: