UBC Zone 4

12HX205

Essential - At or Below Grade

*This rack is only available as a 2 row per tier configuration.

5 TIER RACK SHOWN Ø0.56 HOLES 4 PER RACK 1T - 3T = 15.8 (401) 4T & 5T = 16.0 (406)1T - 3T = 20.2 (513) 4T & 5T = 21.1 (536)

Battery Rack

AZMS UJA1 - 1 Tier* UJA2 - 2 Tier* UJA3 - 3 Tier* UJA5 - 4 Tier* UJA9 - 5 Tier*

LENGTH Blocs per Row	ROWS per TIER	HEIGHT	CATALOG NO.	DIMENSIONS				UNPACKED		PACKED	
				L		С		WEIGHT		WEIGHT	
				in	mm	in	mm	lbs	kg	lbs	kg
4 BLOCS	2	1 TIER	U12HX2054J1TZ4A	24.5	622	19.9	505	53	24	103	47
	2	2 TIER	U12HX2054J2TZ4A					80	36	130	59
	2	3 TIER	U12HX2054J3TZ4A					118	54	168	76
	2	4 TIER	U12HX2054J4TZ4A	25.3	643			277	126	327	148
	2	5 TIER	U12HX2054J5TZ4A					345	157	395	179
5 BLOCS	2	1 TIER	U12HX2055J1TZ4A	30.0	762	25.5	648	58	26	108	49
	2	2 TIER	U12HX2055J2TZ4A					86	39	136	62
	2	3 TIER	U12HX2055J3TZ4A					128	58	178	81
	2	4 TIER	U12HX2055J4TZ4A	30.9	785			299	136	349	158
	2	5 TIER	U12HX2055J5TZ4A					373	169	423	192
6 BLOCS	2	1 TIER	U12HX2056J1TZ4A	35.6	904	31.0	787	64	29	114	52
	2	2 TIER	U12HX2056J2TZ4A					93	42	143	65
	2	3 TIER	U12HX2056J3TZ4A					138	63	188	85
	2	4 TIER	U12HX2056J4TZ4A	36.5	927			323	147	373	169
	2	5 TIER	U12HX2056J5TZ4A					402	182	452	205
10 BLOCS	2	1 TIER	U12HX205101TZ4A	58.0	1473	53.4	1356	80	36	130	59
	2	2 TIER	U12HX205102TZ4A					120	54	170	77
	2	3 TIER	U12HX205103TZ4A					177	80	227	103
	2	4 TIER	U12HX205104TZ4A	58.8	1494			417	189	467	212
	2	5 TIER	U12HX205105TZ4A					519	235	569	258

RACK SPECIFICATIONS:

FRAMES: Steel members covered with gray acid-resistant polyester powder coating

HARDWARE: Zinc-plated steel - RoHS compliant Designed using 0.495g lateral loading SEISMIC:

RACK NOTES:

- 1. Racks are shipped unassembled. All necessary assembly hardware is included see note 2.
- 2. Each frame must be anchored to the floor. Holes are provided at the base of each frame. Please refer to rack diagram for hole size and spacing. Determining the anchor bolt size and supplying the anchor bolts is the responsibility of the customer.
- For rack installation instructions, please refer to EnerSys® Publication No. US-HXRACK-IM, Instructions for Assembling DataSafe™HX UBC Battery Racks.
- 4. Each seismic rack should stand alone with a minimum clearance of 4.0 inches (102 mm) from any other object (walls, other racks, etc.).



EnerSys P.O. Box 14145 Reading, PA 19612-4145 USA

Tel: +1-610-208-1991 +1-800-538-3627 Fax: +1-610-372-8613 EnerSys EMEA Brussels, Belgium Tel: +32 (0)2 247 94 47

EnerSys Asia Guangdong, China Tel: +86 755 2689 3639

Represented by:	