


**Non-Seismic  
12HX300**

**Battery Rack**

**5 TIER RACK SHOWN**

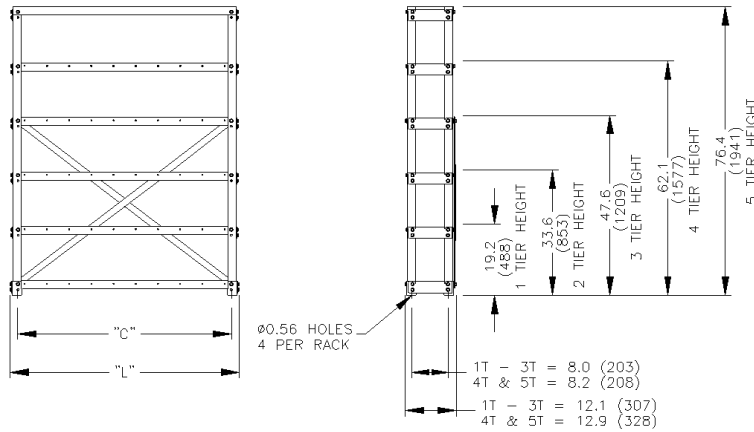

**AZMS UAB1 – 1 Tier  
UAB2 – 2 Tier  
UAB3 – 3 Tier  
UAB5 – 4 Tier  
UAB9 – 5 Tier**

LENGTH Blocs per Row	ROWS per TIER	HEIGHT	CATALOG NO.	DIMENSIONS				UNPACKED WEIGHT		PACKED WEIGHT	
				L		C		lbs	kg	lbs	kg
				in	mm	in	mm				
4 BLOCS	1	1 TIER	U12HX3004J1TZ0A	29.5	749	25.3	643	39	18	89	40
	1	2 TIER	U12HX3004J2TZ0A					66	30	116	53
	1	3 TIER	U12HX3004J3TZ0A					93	42	143	65
	1	4 TIER	U12HX3004J4TZ0A					212	96	262	119
	1	5 TIER	U12HX3004J5TZ0A					259	118	309	140
5 BLOCS	1	1 TIER	U12HX3005J1TZ0A	36.6	930	32.3	820	44	20	94	43
	1	2 TIER	U12HX3005J2TZ0A					74	34	124	56
	1	3 TIER	U12HX3005J3TZ0A					104	47	154	70
	1	4 TIER	U12HX3005J4TZ0A					237	108	287	130
	1	5 TIER	U12HX3005J5TZ0A					290	132	340	154
6 BLOCS	1	1 TIER	U12HX3006J1TZ0A	43.5	1105	39.2	996	49	22	99	45
	1	2 TIER	U12HX3006J2TZ0A					82	37	132	60
	1	3 TIER	U12HX3006J3TZ0A					115	52	165	75
	1	4 TIER	U12HX3006J4TZ0A					262	119	312	142
	1	5 TIER	U12HX3006J5TZ0A					321	146	371	168
10 BLOCS	1	1 TIER	U12HX300101TZ0A	71.1	1806	66.9	1699	68	31	118	54
	1	2 TIER	U12HX300102TZ0A					114	52	164	74
	1	3 TIER	U12HX300103TZ0A					160	73	210	95
	1	4 TIER	U12HX300104TZ0A					363	165	413	187
	1	5 TIER	U12HX300105TZ0A					444	201	494	224

**RACK SPECIFICATIONS:**

**FRAMES:** Steel members covered with gray acid-resistant polyester powder coating  
**HARDWARE:** Zinc-plated steel – RoHS compliant



**RACK NOTES:**

- Racks are shipped unassembled. All necessary assembly hardware is included – see note 2.
- Each frame must be anchored to the floor. Holes are provided at the base of each frame. Please refer to rack diagram for hole size and spacing. Determining the anchor bolt size and supplying the anchor bolts is the responsibility of the customer.
- For rack installation instructions, please refer to EnerSys® Publication No. US-HXRACK-IM, *Instructions for Assembling DataSafe™ HX UBC Battery Racks*.



**EnerSys**  
P.O. Box 14145  
Reading, PA 19612-4145  
USA  
Tel: +1-610-208-1991  
+1-800-538-3627  
Fax: +1-610-372-8613

**EnerSys EMEA**  
Brussels, Belgium  
Tel: +32 (0)2 247 94 47

**EnerSys Asia**  
Guangdong, China  
Tel: +86 755 2689 3639

Represented by: