


**Non-Seismic  
6HX800**

**Battery Rack**

**5 TIER RACK SHOWN**

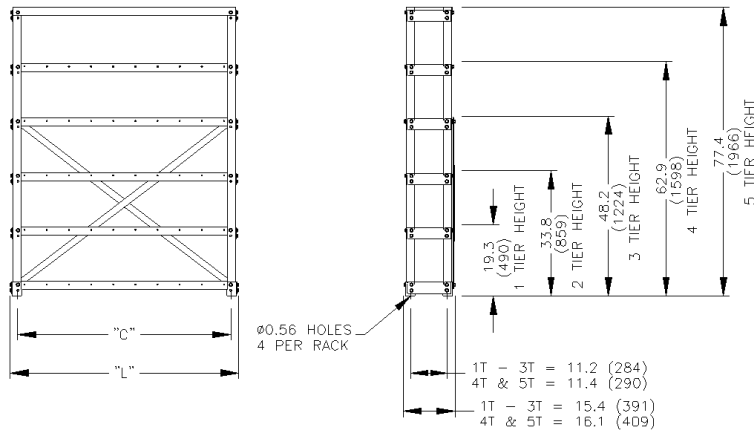

**AZMS UAF1 – 1 Tier  
UAF2 – 2 Tier  
UAF3 – 3 Tier  
UAF5 – 4 Tier  
UAF9 – 5 Tier**

LENGTH Blocs per Row	ROWS per TIER	HEIGHT	CATALOG NO.	DIMENSIONS				UNPACKED WEIGHT		PACKED WEIGHT	
				L		C		lbs	kg	lbs	kg
				in	mm	in	mm				
4 BLOCS	1	1 TIER	U6HX8004J1TZ0A	29.5	749	25.3	643	42	19	92	42
	1	2 TIER	U6HX8004J2TZ0A					70	32	120	54
	1	3 TIER	U6HX8004J3TZ0A					98	45	148	67
	1	4 TIER	U6HX8004J4TZ0A					222	101	272	123
	1	5 TIER	U6HX8004J5TZ0A					272	123	322	146
5 BLOCS	1	1 TIER	U6HX8005J1TZ0A	36.5	927	32.2	818	47	21	97	44
	1	2 TIER	U6HX8005J2TZ0A					78	35	128	58
	1	3 TIER	U6HX8005J3TZ0A					109	49	159	72
	1	4 TIER	U6HX8005J4TZ0A					248	113	298	135
	1	5 TIER	U6HX8005J5TZ0A					302	137	352	160
6 BLOCS	1	1 TIER	U6HX8006J1TZ0A	43.5	1105	39.2	996	52	24	102	46
	1	2 TIER	U6HX8006J2TZ0A					86	39	136	62
	1	3 TIER	U6HX8006J3TZ0A					120	54	170	77
	1	4 TIER	U6HX8006J4TZ0A					273	124	323	147
	1	5 TIER	U6HX8006J5TZ0A					333	151	383	174
10 BLOCS	1	1 TIER	U6HX800101TZ0A	71.1	1806	67.0	1702	73	33	123	56
	1	2 TIER	U6HX800102TZ0A					120	54	170	77
	1	3 TIER	U6HX800103TZ0A					166	75	216	98
	1	4 TIER	U6HX800104TZ0A					377	171	427	194
	1	5 TIER	U6HX800105TZ0A					459	208	509	231

**RACK SPECIFICATIONS:**

**FRAMES:** Steel members covered with gray acid-resistant polyester powder coating  
**HARDWARE:** Zinc-plated steel – RoHS compliant



**RACK NOTES:**

- Racks are shipped unassembled. All necessary assembly hardware is included – see note 2.
- Each frame must be anchored to the floor. Holes are provided at the base of each frame. Please refer to rack diagram for hole size and spacing. Determining the anchor bolt size and supplying the anchor bolts is the responsibility of the customer.
- For rack installation instructions, please refer to EnerSys® Publication No. US-HXRACK-IM, *Instructions for Assembling DataSafe™ HX UBC Battery Racks*.



**EnerSys**  
P.O. Box 14145  
Reading, PA 19612-4145  
USA  
Tel: +1-610-208-1991  
+1-800-538-3627  
Fax: +1-610-372-8613

**EnerSys EMEA**  
Brussels, Belgium  
Tel: +32 (0)2 247 94 47  
  
**EnerSys Asia**  
Guangdong, China  
Tel: +86 755 2689 3639

Represented by: