

PowerSafe™ SBS

Instruction Sheet

	No smoking, no naked flames, no sparks		Clean all acid splash in eyes or on skin with plenty of clean water. Then seek medical help. Acid on clothing is to be washed with water.
	Electrical hazard		Read instructions
	Electrolyte is corrosive		Re-cycle scrap batteries. Contains lead
	Shield eyes		Risk of explosion or fire. Avoid any short circuit. Metallic parts under voltage on the battery, do not place tools or items on top of the battery.
	Danger		

California Proposition 65 Warning – Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

PowerSafe™ SBS batteries are supplied in a charged condition, and are capable of extremely high short circuit currents. Take care to avoid short-circuiting terminals of opposite polarity.

1. Receiving

1.1 In-Transit Damage or Short Shipments

Upon receipt of a shipment, check that the items delivered are undamaged and match the carrier's Bill of Lading. Report any damage or shortages to the carrier. EnerSys® is not responsible for shipment damage or shortages, which the receiver does not report to the carrier.

1.2 Shipment Damage or Shortages

Open the shipping containers and check the contents for damage and against the packing slip. Immediately inform EnerSys of any damaged or missing items.

EnerSys is not responsible for damaged or missing items after a shipment has been in storage.


2. Storage

2.1 Storage Conditions and Time

If a battery cannot be immediately installed it should be stored in a clean, cool, dry area.

During storage batteries lose capacity through self-discharge. High temperature increases the rate of self-discharge and reduces the storage life.

The chart below shows the relationship between open-circuit voltage (OCV) and storage time at various temperatures.

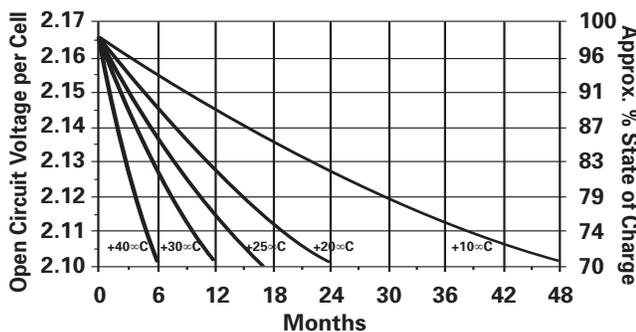

The maximum storage times before a freshening charge is required and recommended open circuit voltage audit intervals are:

Temperature °F / °C	Storage Time Months	OCV Audit Interval Months
50 / 10	48	6
59 / 15	34	6
68 / 20	24	4
77 / 25	17	4
86 / 30	12	3
95 / 35	8.5	2
104 / 40	6	2

Monoblocs must be given a freshening charge when bloc voltages approach the equivalent of 2.10 volts per cell or when the maximum storage time is reached, whichever occurs first.

2.2 Freshening Charge

Charge the monoblocs, or string at a constant voltage equivalent to 2.27Vpc with 10% of the C₈ current available for a period of at least 24 hours.

3. Battery Location

The battery compartment/room must have adequate ventilation to limit hydrogen accumulation to a maximum of 1% by volume of free air.

4. Installation

Each monobloc is supplied with the terminal/connector fasteners.

On each monobloc the positive terminal is identified by a "+" symbol. Install the batteries in accordance with the instructions and/or layout drawing, taking care to ensure correct terminal location and polarity.

Connect the blocs with the connectors and fasteners provided. The fastener torque value is:

Type	Fastener Size	Torque lbf in / Nm
SBS 8	M4	9/1.0
SBS 15 - 60	M6	35 / 3.9
SBS 110 - 390	M8	44 / 5.0
SBS J13 - 70	M6	60 / 6.8
SBS B8 - 14	M8	44 / 5.0
SBS C11	M8	44 / 5.0
SBS 145	M6	44 / 5.0
SBS B8F - 14F	M6	44 / 5.0
SBS C11F	M6	44 / 5.0
SBS 145F	M6	44 / 5.0
SBS 170F - 190F	M6	80 / 9.0

Place the insulating covers in position immediately after tightening the fasteners.

5. Operation

Constant voltage chargers are recommended. The charging voltage should be set at the equivalent of 2.27Vpc at 77°F/25°C or 2.29Vpc at 68°F/20°C. The minimum charging voltage, at any temperature, is 2.21 volts per cell. The recommended float voltage temperature compensation is:

	Temperature °F / °C						
	50/10	59/15	68/20	77/25	86/30	95/35	104/40
Recommended	2.33	2.31	2.29	2.27	2.25	2.23	2.21
Minimum	2.31	2.29	2.27	2.25	2.23	2.21	2.21

Do not over-discharge the battery. This can be avoided by including a Low Voltage Disconnect switch in the circuit or by disconnecting the battery from the load when the end discharge voltage is reached. The float voltage must be applied to the battery as soon as possible, and not later than 7 days after any discharge.

6. Maintenance

In practice the user usually specifies the maintenance schedule based on site criticality, location and manpower.

The following is a suggested maintenance schedule.

Every Six Months (Record All Readings)

Measure the battery string voltage. If necessary, adjust the float voltage to the correct value.

Measure individual bloc voltages. The blocs should be within 5% of the average.

Inspect for contamination by dust, loose or corroded connections. If necessary isolate the string/bloc and clean with a damp soft cloth.

Do not use solvents or scouring powders to clean the blocs. Contact EnerSys® if you have any questions regarding maintenance.


7. Disposal

PowerSafe™ SBS batteries are recyclable. Scrap batteries must be packaged and transported in accordance with prevailing transportation rules and regulations.

Scrap batteries must be disposed of in compliance with local and national laws by a licensed or certified lead acid battery recycler.

Type	Connector Part No.	
	A	B
SBS 8	2205-8982	2205-8981
SBS 15	2205-9851	2205-9850
SBS 30, 40	2204-1123	2204-1124
SBS 60	2204-1123	2205-4260
SBS 110 - 300	2205-9887	2205-8865
SBS 390	2205-9759 x 2	N/A
SBS J13, J16	2205-9851	2205-9850
SBS J30, J40	2204-1123	2205-4260

Type	Connector Part No.	
	A	B
SBS J70	2204-1123	2205-4420
SBS B8 - 14	N/A	2205-8919
SBS C11	N/A	2205-8919
SBS 145, 145F-V	2205-0163	2205-0163
SBS B8F-14F	C11CONN	N/A
SBS C11F	C11CONN	N/A
SBS 145F	2205-0162	N/A
SBS 170F-190F	VFCONN	N/A

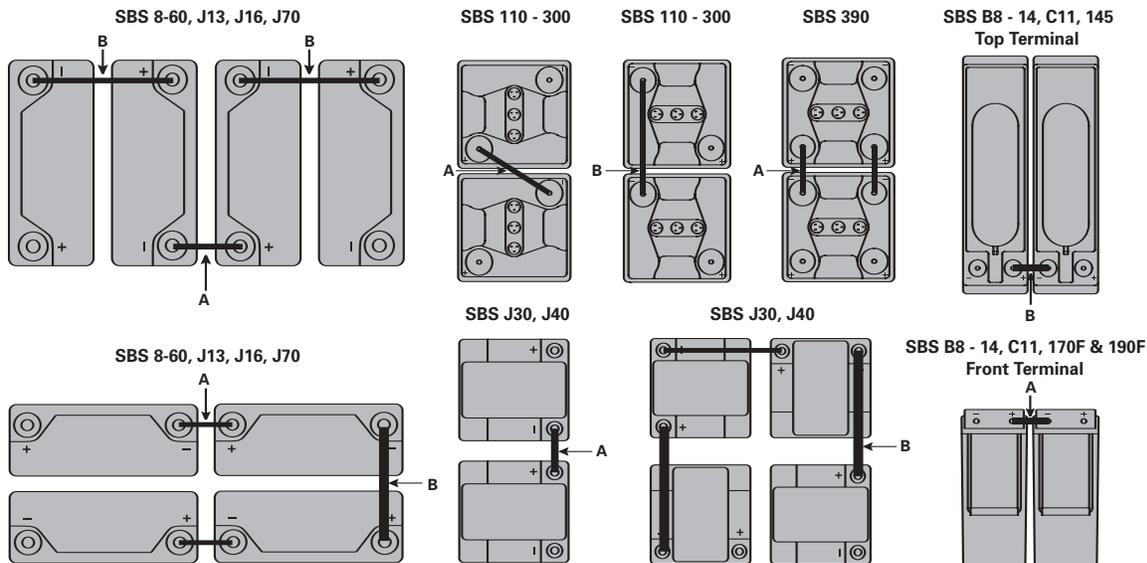

EnerSys
P.O. Box 14145
Reading, PA 19612-4145
USA
Tel: +1-610-208-1991
+1-800-538-3627
Fax: +1-610-372-8613

Sales and Support Locations

EnerSys
444 Foxon Rd
East Haven, CT 06513
Tel: (203)-469-0070
Fax: (203)-773-1010

EnerSys
61 Parr Blvd
Bolton, Ontario
Canada L7E 2Z8
Tel: (905)-951-4441

EnerSys de Mexico
S.A. de C.V.
Ave. Presidente Juarez 74-A
Col. Bellavista C.P. 54080
Tlalneptam Estado
de Mexico
Tel: (52-55)-2628-0504
Fax: (52-55)-5362-7774

Distributed by:

Printed in USA
© 2008 EnerSys. All rights reserved.
Trademarks and logos are the property of EnerSys
and its affiliates unless otherwise noted.